

RK-JK-HC05 LED Headlights

Installation Manual



BEFORE YOU START Park on level ground, turn off the ignition, disconnect the negative battery terminal, and let components cool before installation.

Safety Information


- Park the vehicle on a level surface and engage the parking brake.
- Turn off the ignition and remove the key before installation.
- Disconnect the negative battery terminal to prevent electrical short circuits.
- Please wait until the bulbs and housings have completely cooled before handling them.

Tools Required

- Socket wrench set
- Phillips and flathead screwdrivers
- Trim removal tool
- Pliers (optional)
- Torque wrench

Wiring Diagram

Match each wire by function. Secure every connection before testing the vehicle lights.

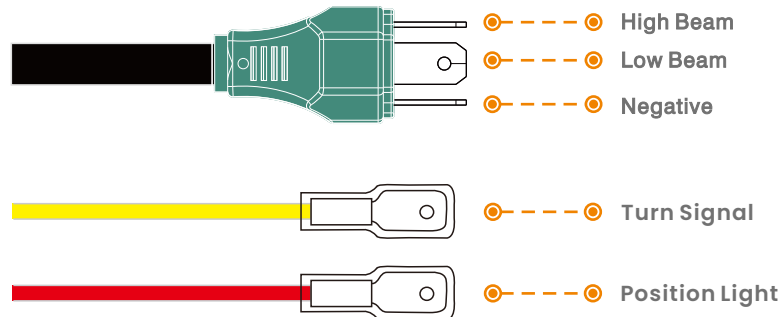

Adapter Harness

Connects the factory vehicle connector to the light assembly for plug-and-play installation.



**THANK YOU FOR CHOOSING
4x4 ROCKCATS!**

support@4x4rockcats.com
RK-JK-HC05 Installation Guide | Page 1



HOW TO INSTALL



1

Turn off the engine and disconnect the battery. Remove the existing headlights from the bumper and keep all hardware that attaches the headlights to the vehicle.

2

Unplug the connector of the existing headlight. Plug in the headlight H4 plugs, and connect the wiring harnesses for the turn signals and parking lights. Test the lights before reinstalling the hardware.

3

Install the new headlight into the housing. Secure the headlight using the factory mounting hardware. Tighten all screws securely.

FITMENT

- 1997 Land Rover Defender 90
- 1995 Land Rover Defender 90
- 1995 Land Rover Range Rover County Classic Sport Utility 4-Door
- 1983 Land Rover 90/110
- 1984 Land Rover 90/110
- Jeep Wrangler JK...

Visit 4x4rockcats.com for complete fitment list.

PRODUCT WARNINGS

Use only with 12 V DC input. The light may become hot during continuous use. Avoid burns and allow cooling before service.

QUICK TROUBLESHOOTING

Issue: Flickering/intermittent light - check ground and plug connection.
Issue: No illumination - confirm 12 V input and battery connection.

**THANK YOU FOR CHOOSING
4x4 ROCKCATS!**

support@4x4rockcats.com
RK-JK-HC05 Installation Guide | Page 2

