

RK-JK-HC08 LED Headlights

Installation Manual



BEFORE YOU START Park on level ground, turn off the ignition, disconnect the negative battery terminal, and let components cool before installation.

Safety Information


- Park the vehicle on a level surface and engage the parking brake.
- Turn off the ignition and remove the key before installation.
- Disconnect the negative battery terminal to prevent electrical short circuits.
- Please wait until the bulbs and housings have completely cooled before handling them.

Tools Required

- Socket wrench set
- Phillips and flathead screwdrivers
- Trim removal tool
- Pliers (optional)
- Torque wrench

Wiring Diagram

Match each wire by function. Secure every connection before testing the vehicle lights.

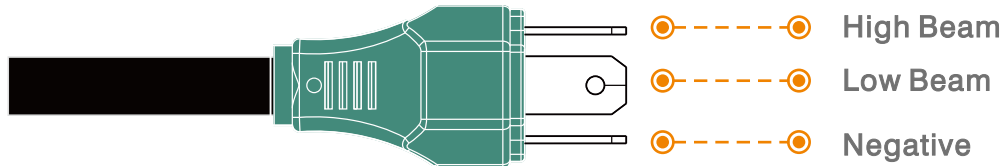

Adapter Harness

Connects the factory vehicle connector to the light assembly for plug-and-play installation.



**THANK YOU FOR CHOOSING
4x4 ROCKCATS!**

support@4x4rockcats.com
RK-JK-HC08 Installation Guide | Page 1



HOW TO INSTALL



1

Turn off the engine and disconnect the battery. Remove the existing headlights from the bumper and keep all hardware that attaches the headlights to the vehicle.

2

Unplug the connector of the existing headlight. Plug in the headlight H4 plugs. Test the lights before reinstalling the hardware.

3

Install the new headlight into the housing. Secure the headlight using the factory mounting hardware. Tighten all screws securely.

FITMENT

- 1997 Land Rover Defender 90
- 1995 Land Rover Defender 90
- 1995 Land Rover Range Rover County Classic Sport Utility 4-Door
- 1983 Land Rover 90/110
- 1984 Land Rover 90/110...

Visit 4x4rockcats.com for the complete fitment list.

PRODUCT WARNINGS

Use only with 12 V DC input. The light may become hot during continuous use. Avoid burns and allow cooling before service.

QUICK TROUBLESHOOTING

Issue: Flickering/intermittent light - check the ground and plug connection.
Issue: No illumination - confirm 12 V input and battery connection.

**THANK YOU FOR CHOOSING
4x4 ROCKCATS!**

support@4x4rockcats.com
RK-JK-HC08 Installation Guide | Page 2

